

► COMMON SHEET\_PRINT

| NO | PART NO     | ITEM                                 | QTY |
|----|-------------|--------------------------------------|-----|
| 1  | AGOT0ACP001 | BALL LIFT SCREW VIFEO COVER_PRI      | 2   |
| 2  | AGOT0ACP002 | BALL LIFT SCREW TRAIN LED COVER _PRI | 2   |
| 3  | AGOT0ACP003 | BALL SCREW PIPE UPPER_PRI            | 4   |
| 4  | AGOT0ACP004 | BILLBOARD BIGWIN FND COVER PRI       | 2   |
| 5  | AGOT0ACP005 | BILLBOARD BLS TOP COVER_PRI          | 2   |
| 6  | AGOT0ACP006 | BILLBOARD CENTER DECO PRI-L          | 2   |
| 7  | AGOT0ACP007 | BILLBOARD CENTER DECO PRI-R          | 2   |
| 8  | AGOT0ACP008 | BILLBOARD DECO_L_PRI                 | 2   |
| 9  | AGOT0ACP009 | BILLBOARD DECO_R_PRI                 | 2   |
| 10 | AGOT0ACP010 | BILLBOARD SIDE POP COVER_PRI         | 2   |
| 11 | AGOT0ACP011 | BILLBOARD TITLE COVER PRI            | 2   |
| 12 | AGOT0ACP012 | CABINET BUTTON LED COVER PRI         | 2   |
| 13 | AGOT0ACP013 | PLAYFIELD CENTER COVER PRI           | 2   |
| 14 | AGOT0ACP014 | TRAIN BALL CHECK UPPER LED COVER PRI | 2   |
| 15 | AGOT0ACP015 | TRAIN HEAD FRONTA PRI-L              | 2   |
| 16 | AGOT0ACP016 | TRAIN HEAD FRONTA PRI-R              | 2   |
| 17 | AGOT0ACP017 | TRAIN HEAD SIDE PRI-L                | 2   |
| 18 | AGOT0ACP018 | TRAIN HEAD SIDE PRI-R                | 2   |
| 19 | AGOT0ACP019 | TRAIN HEAD TOP PRI-L                 | 2   |
| 20 | AGOT0ACP020 | TRAIN HEAD TOP PRI-R                 | 2   |
| 21 | AGOT0ACP021 | TRAIN SIDE PRI-A                     | 2   |
| 22 | AGOT0ACP022 | TRAIN SIDE PRI-B                     | 2   |
| 23 | AGOT0ACP023 | TRAIN SIDE PRI-C                     | 2   |
| 24 | AGOT0ACP024 | TRAIN SIDE PRI-D                     | 2   |
| 25 | AGOT0ACP025 | TRAIN SIDE PRI-E                     | 2   |
| 26 | AGOT0ACP026 | UPPER RAIL LED COVER PRI-L           | 2   |
| 27 | AGOT0ACP027 | UPPER RAIL LED COVER PRI-R           | 2   |
| 28 | AGOT0ACP028 | UPPER RAIL LED DISPLAY PRI-L         | 2   |
| 29 | AGOT0ACP029 | UPPER RAIL LED DISPLAY PRI-R         | 2   |
| 30 | AGOT0ACP030 | UPPER RAIL SENSOR COVER PRI          | 2   |
| 31 | AGOT0ACP031 | TRAIN SIDE PRI-A_A                   | 2   |
| 32 | AGOT0ACP032 | TRAIN SIDE PRI-B_B                   | 2   |
| 33 | AGOT0ACP033 | TRAIN SIDE PRI-C_C                   | 2   |
| 34 | AGOT0ACP034 | TRAIN SIDE PRI-D_D                   | 2   |
| 35 | AGOT0ACP035 | BALL LIFT SCREW TRAIN LED COVER_01   | 2   |
| 36 | AGOT0ACP036 | CONTROL PANEL COVER PRI              | 1   |
| 37 | AGOT0ACP037 | CONTROL PANEL FRONT COVER PRI        | 1   |
| 38 | AGOT0ACP038 | CABINET BUTTON LED COVER             | 2   |

| COMMON SHEET_PRINT |    |    |    |
|--------------------|----|----|----|
| 1                  | 2  | 3  | 4  |
| 5                  | 6  | 7  | 8  |
| 9                  | 10 | 11 | 12 |
| 13                 | 14 | 15 | 16 |
| 17                 | 18 | 19 | 20 |
| 21                 | 22 | 23 | 24 |
| 25                 | 26 | 27 | 28 |
| 29                 | 30 | 31 | 32 |
| 33                 | 34 | 35 | 36 |
| 37                 | 38 |    |    |

► COMMON SHEET

| NO  | PART NO     | ITEM                                    | QTY |
|-----|-------------|---|-----|
| A1  | MGOT0SHE001 | BALL LIFT SCREW SIDE COVER SHEET        | 2   |
| A2  | MGOT0SHE002 | FRONT DOOR_01_SHE                       | 2   |
| A3  | MGOT0SHE003 | FRONT DOOR_02_SHE                       | 2   |
| A4  | MGOT0SHE004 | FRONT DOOR_03_SHE                       | 2   |
| A5  | MGOT0SHE005 | FRONT DOOR_04_SHE                       | 2   |
| A6  | MGOT0SHE006 | FRONT DOOR_05_SHE                       | 2   |
| A7  | MGOT0SHE007 | FRONT DOOR_06_SHE                       | 2   |
| A8  | MGOT0SHE008 | FRONT DOOR_07_SHE                       | 2   |
| A9  | MGOT0SHE009 | FRONT DOOR_08_SHE                       | 2   |
| A10 | MGOT0SHE010 | FRONT DOOR_09_SHE                       | 2   |
| A11 | MGOT0SHE011 | SIDE DOOR_01_SHE                        | 2   |
| A12 | MGOT0SHE012 | SIDE DOOR_02_SHE                        | 2   |
| A13 | MGOT0SHE013 | BUTTON_SHE                              | 2   |
| A14 | MGOT0SHE014 | PLAYFIELD INNER COVER_L_SHEET           | 2   |
| A15 | MGOT0SHE015 | PLAYFIELD INNER COVER_R_SHEET           | 2   |
| A16 | MGOT0SHE016 | HOW TO PLAY SHEET                       | 2   |
| A17 | MGOT0SHE017 | BALL LIFT SCREW TRAIN LED COVER STICKER | 2   |

| COMMON SHEET |     |     |     |
|--------------|-----|-----|-----|
| A1           | A2  | A3  | A4  |
| A5           | A6  | A7  | A8  |
| A9           | A10 | A11 | A12 |
| A13          | A14 | A15 | A16 |
| A17          |     |     |     |